 


ZEN™

INSIDE THE BOX

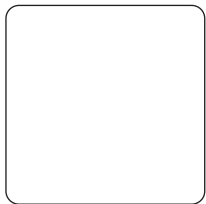

 
Main display




2 x screws



2 x wall plugs

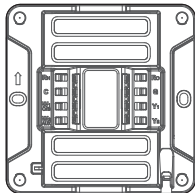


Wall mount

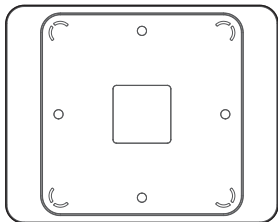 

Adapter plate

R _H	R _H	Y ₁	Y ₁
R _C	R _C	Y ₂	Y ₂
O/B	O/B	G	G
AUX	AUX	W ₁	W ₁
C	C	W ₂	W ₂

 Wire labels




4 x AA Batteries


GETTING STARTED

The ZEN thermostat™ can only be connected to low voltage systems. Ensure that you complete the following steps before you begin installation.

 1. Turn off main breaker

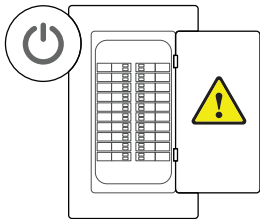

 2. Remove cover from old unit

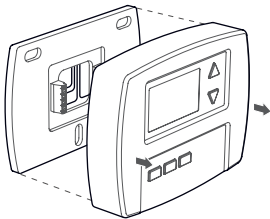

3. Check

Is your system labeled 120V-240V? Do you see thick wires with wire-nuts? If you do your system is NOT compatible with the ZEN thermostat™.

If you're unsure, please contact your home automation provider or HVAC installer.



WARNING



Extra Low Voltage only. Do not connect to mains voltages.
Do not interconnect the outputs of class two circuits

4. Begin installation

If you are certain that your system is low voltage, begin the installation process by following the online guide:

zethermostat.com/install



You will need an internet web browser to complete installation.

 


It takes approximately 45 minutes to get your ZEN thermostat™ ready to use.



Have a question? Visit zethermostat.com/faq

QUICK LOOK

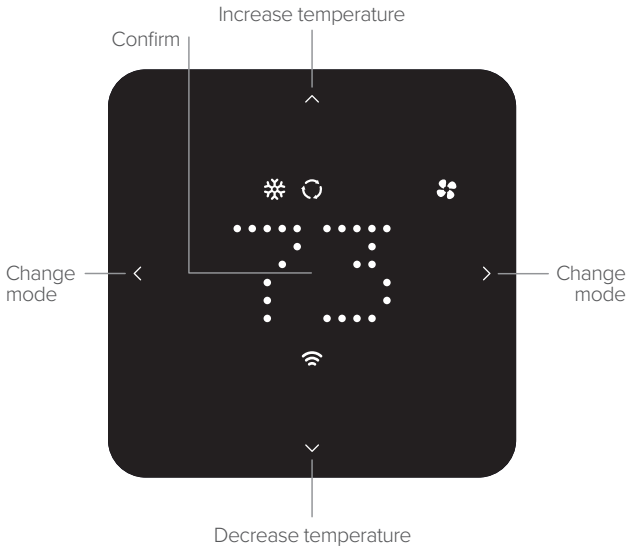

BASIC OPERATION



Center touch to wake.
Display shows current ambient
temperature.



Center touch again.
Display shows current set point
temperature.
















Touch left or right to select
operating modes. Center touch
to confirm your selection.



Touch up or down to change the
set point temperature. Center
touch to confirm your selection.

ICON GUIDE

Status		Network Connected		Second stage heating or cooling
		Active	EMER	Emergency heating
		Heating Mode	DR	Demand response event in progress
		Cooling Mode		Eco mode
		Fan On Continuous		Schedule Mode
		Auto Mode		Preferences Mode
Warning		Battery Low		Error
		Filter Change Required		

Some modes may not be enabled by your home automation provider.

USER PREFERENCES

Access the user preferences by removing the unit from the wall and center touch to activate options.

Touch right or left to scroll through the preferences. Touch up or down to modify a preference. Center touch to confirm.

Info



View software version and configuration setting.

Units



Fahrenheit



Celsius

Brightness



Language



English



Français



Español

Caring for your ZEN thermostat™

Clean with a damp cloth only. Avoid using chemical cleaning agents.

Rebooting or Resetting to Factory Defaults

If you are experiencing issues, reboot your display by removing and reinserting the batteries. This will retain your configuration settings. To restore to factory settings, press the Config button on the back of the main display 20 times, the display will beep five times to confirm the reset.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

This equipment complies with the FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and any part of your body.

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Industry Canada Notice

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

zethermostat.com

Designed in Australia by Planet Innovation

Powered by MMB Networks RapidConnect

Built in Malaysia

Model: ZEN-01, Electrical Rating: 24VAC, 2A

FCC ID: 2ADJL-ZEN01, IC ID: 12476A-ZEN01



ZigBee[®]
Certified product